

UVC Air Treatment Product for 16" or 24" Duct

Installation Instructions

251001-xxx



IMPORTANT!

Only qualified technicians should install this product.

Install in accordance with building codes.

Read instructions carefully including safety warnings.

INSTALLATION INSTRUCTIONS


UV595 and 395 is typically installed on the supply side of air duct approximately 6 to 12 inches (15 to 30cm) before the existing air filtration system.

UV595 and 395 LED strip should be aimed towards existing filter. Beam angle is 120°, however is invisible and harmful to eyes.

Note: UV595 and 395 has on/off power switch and LED indicator, illuminated when power is on and power is applied to the LED circuit board.

MOUNTING

Mark and drill (using hole saw) a 4 inch (10cm) hole into air duct. Place UV595 LEDs inside air duct and fasten body to duct using 4 screws provided.

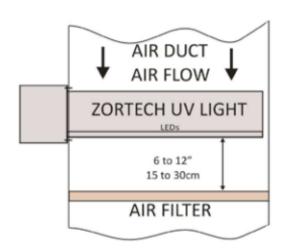

UV595 and 395 reduces biological contaminants such as bacteria, mold and allergens in indoor air using UVC light. The system is installed in the duct work of the central air system.

WARNING

PROTECT EYES FROM UV LIGHT

TURN OFF UNIT OR DISCONNECT BEFORE SERVICING

